

Libra



Manual

 **APCO Aviation**
Setting Future Standards

Factory: 7, Chalamish Street - Industrial Park - Caesarea 38900 ISRAEL [Hwww.apcoaviation.com](http://www.apcoaviation.com)
Tel: +972 4 6273727 Fax +972 4 6273728




CONTENTS:

1	LIBRA TECHNICAL DATA	4
2	LIBRA CERTIFICATION DATA	4
3	DISCLAIMER OF LIABILITY	5
4	CONSTRUCTION	5
5	MATERIALS	6
6	FLEXON® Batten system:	6
7	TRIMMING	7
8	HARNESS	7
9	SPEED SYSTEM	7
9.1	ASSEMBLY & ADJUSTMENT	7
9.2	OPTION 1	7
9.3	OPTION 2	8
10	EMERGENCY PARACHUTE ATTACHMENT	9
11	RISERS	9
12	BULLET RISER	11
13	INSPECTION	12
13.1	GENERAL	12
13.2	BRAKE SETTING	12
13.3	ACCELERATED FLIGHT BRAKE COMPENSATOR	13
13.4	FIRST CHECK AND PREFLIGHT INSPECTION	13
13.5	REGULAR INSPECTION CHECKS	14
13.6	LINE MAINTENANCE	14
14	TAKE OFF	15
14.1	LAYOUT	15
14.2	ALPINE LAUNCH OR FORWARD LAUNCH	15
14.3	STRONG WIND AND REVERSE LAUNCH	15
14.4	TOW OR WINCH LAUNCHING	16
15	FLIGHT TECHNIQUES	16
15.1	FLYING SPEED	16
15.2	THERMAL FLYING	17
15.3	ASYMMETRIC COLLAPSE	17
15.4	CRAVAT	17
15.5	FRONT STALL OR SYMMETRIC COLLAPSE	17
15.6	B-STALL	17
15.7	BIG EARS	18
15.8	DEEP STALL OR PARACHUTAL STALL	18
15.8.1	Signs of parachutal stall	18
15.8.2	Exit from parachutal stall	18
15.9	SPIRAL DIVES	19
15.10	STRONG TURBULENCE	19
15.11	STEERING NOT FUNCTIONING	19
16	LANDING	20
16.1	TREE LANDING	20
16.2	WATER LANDING	20
16.3	LANDING IN TURBULENCE	20
17	PACKING	21
18	MAINTENANCE & CLEANING	21
18.1	Butt holes (Velcro closure on trailing edge tip)	21
19	STORAGE	21



20	DAMAGE	22
21	GENERAL ADVICE	22
22	LIBRA EXTRA SMALL SKETCHES	23
23	LIBRA SMALL SKETCHES	24
24	LIBRA MEDIUM SKETCHES	25
25	LIBRA LARGE SKETCHES	26
26	LIBRA SMALL CERTIFICATION	27
27	LIBRA MEDIUM CERTIFICATION	28
28	LIBRA LARGE CERTIFICATION	29

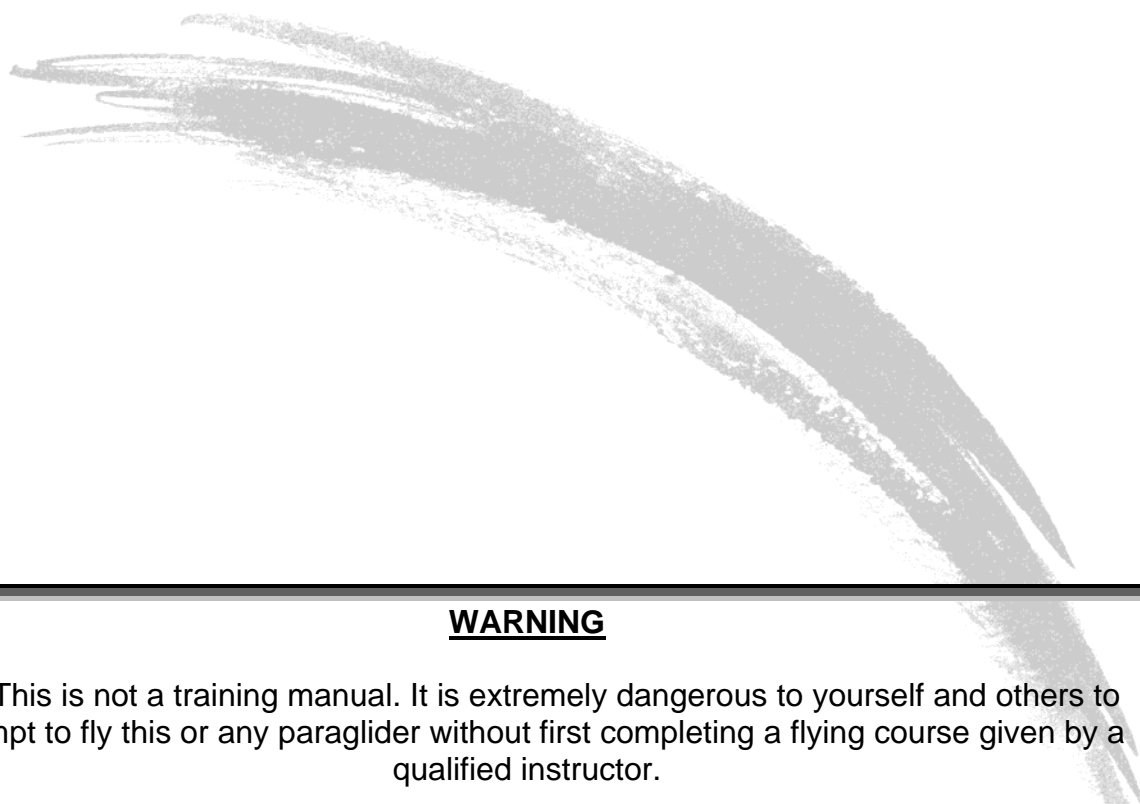

WARNING

This is not a training manual. It is extremely dangerous to yourself and others to attempt to fly this or any paraglider without first completing a flying course given by a qualified instructor.

Apco Aviation's gliders are carefully manufactured and inspected by the factory. Please use the glider only as described in this manual. Do not make any changes to the glider.

**AS WITH ANY SPORT - WITHOUT TAKING THE APPROPRIATE PRECAUTIONS,
PARAGLIDING CAN BE DANGEROUS.**



1 LIBRA TECHNICAL DATA

Size	X-Small	Small	Medium	Large
Cells	52	53	55	57
Area m ²	25.54	26.36	28.00	29.64
Area (projected) m ²	22.79	23.53	25.01	26.49
Span (incl. Stabiliser) m	11.9	12.20	12.82	13.44
Span (projected) m	9.94	10.22	10.78	11.34
Aspect Ratio	5.54	5.65	5.87	6.09
Aspect Ratio (projected)	4.35	4.45	4.65	4.85
Pilot Weight, Kg (all up)	55-75	70-95	85-110	100-130
Weight of Canopy Kg	5.8	6.0	6.3	6.6
Root Cord m	2.71	2.71	2.71	2.71
Tip Cord m	0.54	0.54	0.54	0.54
Length of Lines on B m	7.15	7.4	7.9	8.4
Total length of line used m	335	342	360	378
LINES				
	Material	Diameter	Strength	
Top ; st top	Dyneema	1.0mm	90kg	
Mid;st	Super Aramid	1.2mm	120kg	
Bottom A3;A5;B3;B5	Super Aramid	1.8mm	230kg	
Bottom A1;B1	Super Aramid	1.9mm	320kg	
Bottom C ; D	Super Aramid	1.5mm	150kg	
Brake Cascades	Dyneema	1.1mm	95kg	
Steering Line	Polyester	2.0mm	85kg	
FABRIC				
Sail Cloth		"Zero Porosity" Ripstop Nylon		
Warranty		3 Years / 250 hours		

GLIDER PERFORMANCE DATA

V-min.	21km/h
V-trim	38 km/h
V-max.	55+ km/h
Min Sink (at optimum wing loading)	0.9 m/s

2 LIBRA CERTIFICATION DATA

GLIDER CERTIFICATION DATA

LIBRA EXTRA-SMALL	Pending
LIBRA SMALL	EN – C Certification
LIBRA MEDIUM	EN - C Certification
LIBRA LARGE	EN – C Certification





3 DISCLAIMER OF LIABILITY

Taking into consideration the inherent risk in paragliding, it must be expressly understood that the manufacturer and seller do not assume any responsibility for accidents, losses and direct or indirect damage following the use or misuse of this product.

APCO Aviation Ltd. is engaged in the manufacture and sale of hang gliding, paragliding, motorized Para/hang gliding and emergency parachute equipment.

This equipment should be used under proper conditions and after proper instruction from a qualified instructor. APCO Aviation Ltd. has no control over the use of this equipment and a person using this equipment assumes all risks of damage or injury.

APCO Aviation Ltd. disclaims any liability or responsibility for injuries or damages resulting from the use of this equipment.

The glider is designed to perform in the frame of the required class as certified.

4 CONSTRUCTION

The glider is constructed with a top and bottom surface, connected by ribs.

One top and bottom panel, together with the connecting ribs is called a cell.

Each cell has an opening on the front lower part. The cells fill with air forcing the panels to take the shape dictated by the airfoil (rib) section.

On either side the wing ends in a stabilizer or wing tip, which provides straight-line (Yaw) stability and produces some outward force to keep the span-wise tension.

The front part of the ribs use APCO's FLEXON batten system to keep the leading edge shaped at high speeds and in turbulent air. They also improve the performance and the launch characteristics of the glider.

The line hook-up points are made of Dyneema and imbedded in the bottom surface of the wing for minimal drag and maximum performance.



5 MATERIALS

The glider is made from tear resistant Ripstop Nylon cloth, which is P.U. coated to zero porosity and then siliconized to give the fabric high resistance to the elements. Different cloth is used for the top, bottom and ribs due to their different functions.

The lines are made of superaramid covered with a polyester sheath for protection against UV, wear and abrasion.

The bottom section of the brake lines are made of polyester because of its better mechanical properties.


The carabiners that attach the lines to the risers are made of stainless steel.

6 FLEXON® Batten system:

New generation FLEXON ® batten system incorporated (see below) in the leading edge of the ribs, insuring perfect profile shape (instead of traditional Mylar reinforcement). FLEXON ® battens reduce the weight of the glider by an additional 500gr. and unlike Mylar reinforcement will guarantee no deterioration in performance or launch.

Additional advantage of FLEXON batten is that it is practically indestructible, safeguarding the performance and launch over the lifespan of the glider.

How it Works:

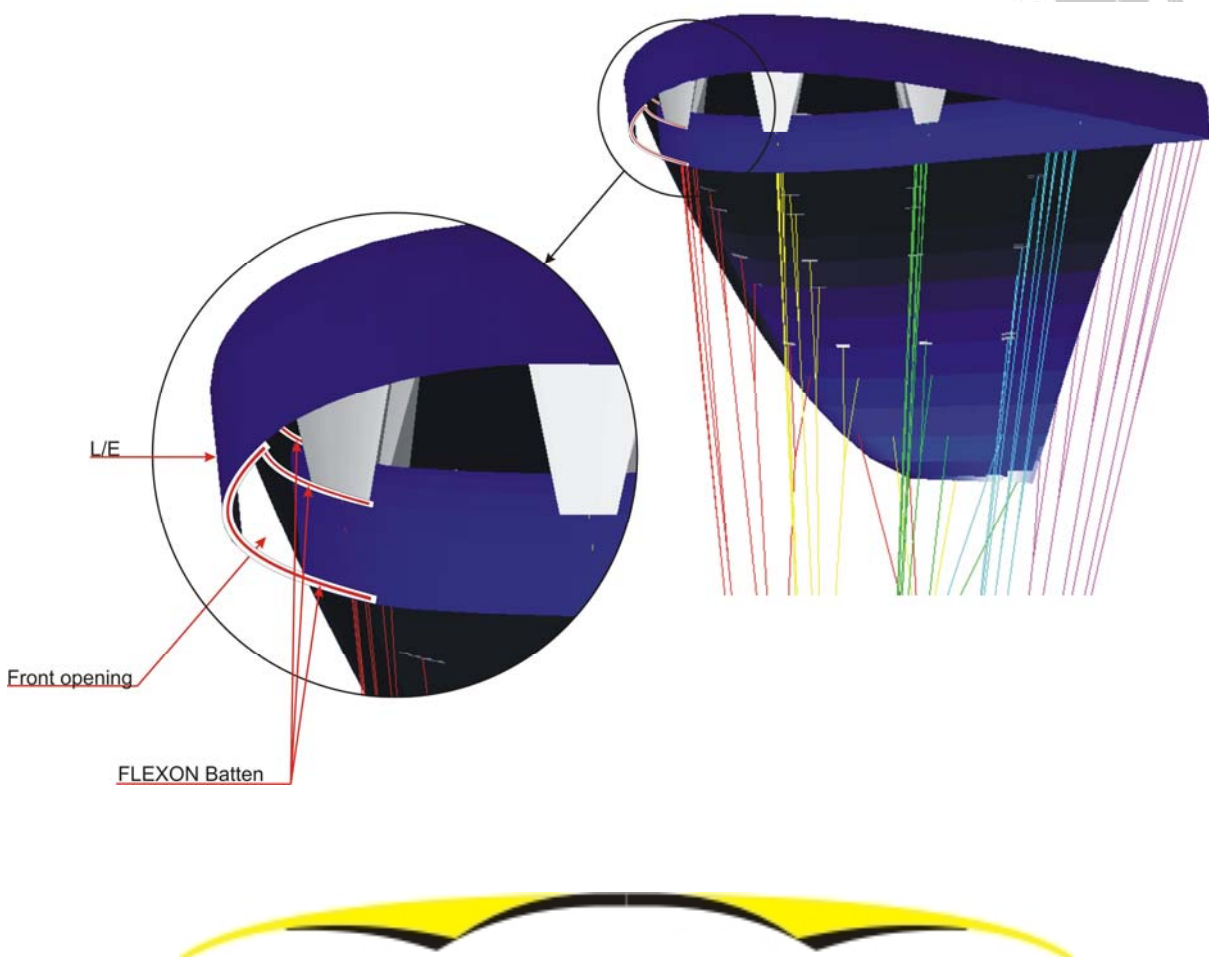



7 TRIMMING

All Apco gliders are trimmed for optimum performance combined with unsurpassed safety. It is very important not to re-trim or tamper with any of the lines or risers as this may alter the performance and safety. Trimming of the brake line should be done in accordance with this manual and carefully checked before flying.

8 HARNESS

All of Apco's gliders are developed with the use of ABS (Automatic Bracing System) type harnesses without cross bracing. We recommend the use of an ABS harness with all our gliders. All certified harnesses can be used with our gliders. For best safety and performance we recommend an Apco harness equipped with a Mayday emergency parachute.

CAUTION:

WE RECOMMEND NOT TO USE CROSS BRACING STRAPS.

APCO GLIDERS ARE DEVELOPED AND TESTED WITHOUT THE USE OF CROSS BRACING. USING AN ABS HARNESS WITH CHEST STRAP SET AT THE SPECIFIED WIDTH (CHECK THE CERTIFICATION STICKER ON YOUR GLIDER) WILL RESULT IN THE HIGHEST PASSIVE SAFETY ON YOUR GLIDER.

9 SPEED SYSTEM

9.1 ASSEMBLY & ADJUSTMENT

Apco gliders are supplied with a speed system as illustrated in option I. The pilot can change the speed system to the traditional "Apco" speed system to use the full accelerator range depending on the pulley arrangement on the harness being used (Option II)

9.2 OPTION 1

First attach the harness to the glider. Remove the Chain Link from the end of the accelerator line attached to the speed bar, then thread it through the elasticized ring on the harness, then through harness pulley and then re-attach it to the Chain link with a larks-head knot. Hook the Chain link onto the Chain Link on the riser of the corresponding side. Sit in the harness and have someone hold the riser up in a flying position for you. Adjust the speed bar line by pulling the end through the speed bar tube and moving the knot. The Bar should be about 10 cm (or closer if you have a second step) away from the front of the harness seat. This allows you to easily reach the bar with your foot, and will allow you to use the full range of the speed bar if you extend your legs fully. Do not adjust the speed system too short, as this will cause it to be activated permanently while flying, and could be dangerous. It is possible to fit a second step to the system, if one has trouble using the full range of the system (supplied separately).



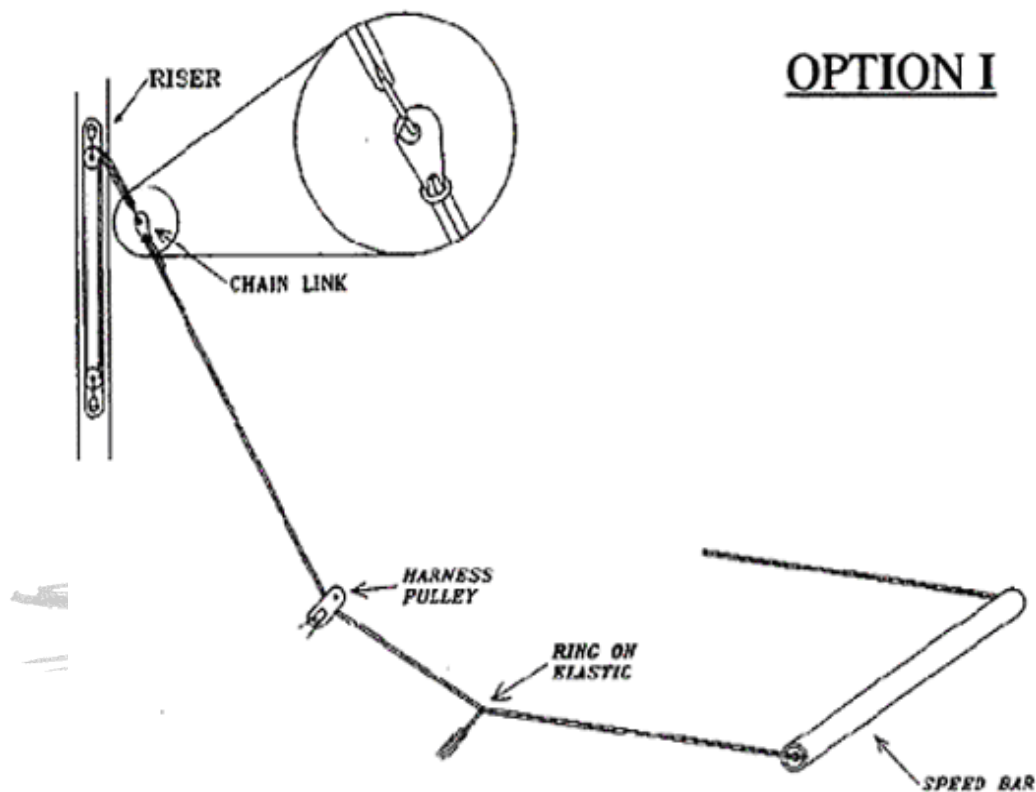


Figure 9-1

9.3 OPTION 2

First attach the harness to the glider, then thread the accelerator line from the top pulley on the riser, through the pulleys (and the elasticized ring if present) on your harness and then attach it to the supplied speed bar. To adjust the length and activation point of the speed system, sit in the harness and ask someone to hold the riser up in a flying position. By pulling out the end of the line protruding above the upper pulley on the riser and by moving the knot you can adjust the speed system. The Bar should be about 10 cm (or closer if you have a second step) away from the front of the harness seat. This allows you to use the full range of the speed bar if you extend your legs fully. Do not adjust the speed system too short as this will cause the speed system to be activated permanently while flying and could be dangerous. It is possible to fit a second step to the system if the pilot has trouble using the full range of the speed system (second step is supplied separately).



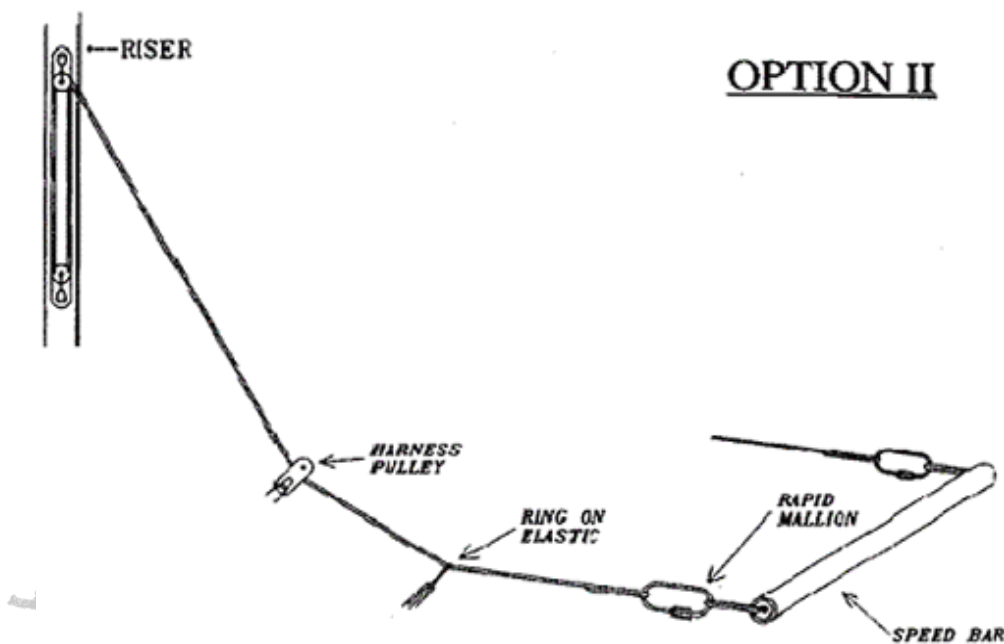


Figure 9-2

WARNING:

The use of the speed system in turbulent conditions or close to the ground is dangerous. While flying with the accelerator, the glider has a reduced angle of attack and is therefore more susceptible to turbulence and may collapse or partially deflate. Gliders react faster when accelerated and may turn more. The accelerator should immediately be released in this case.


10 EMERGENCY PARACHUTE ATTACHMENT

It is recommended to use a certified rescue parachute when flying. Attaching the rescue parachute should be done in accordance with the recommendation of the harness and reserve parachute manufacturer.

11 RISERS

The LIBRA is supplied with unique bullet risers (exclusive to APCO) featuring a split A riser. The 1st A-riser attaches to the central two A lines (A1 & A3). The second A-riser is attached to the outermost A line (A5). This is to facilitate Big ears or Tip tucks. At no time should the pilot change the risers or use risers not intended for this specific glider as this will affect the performance and safety of the glider.



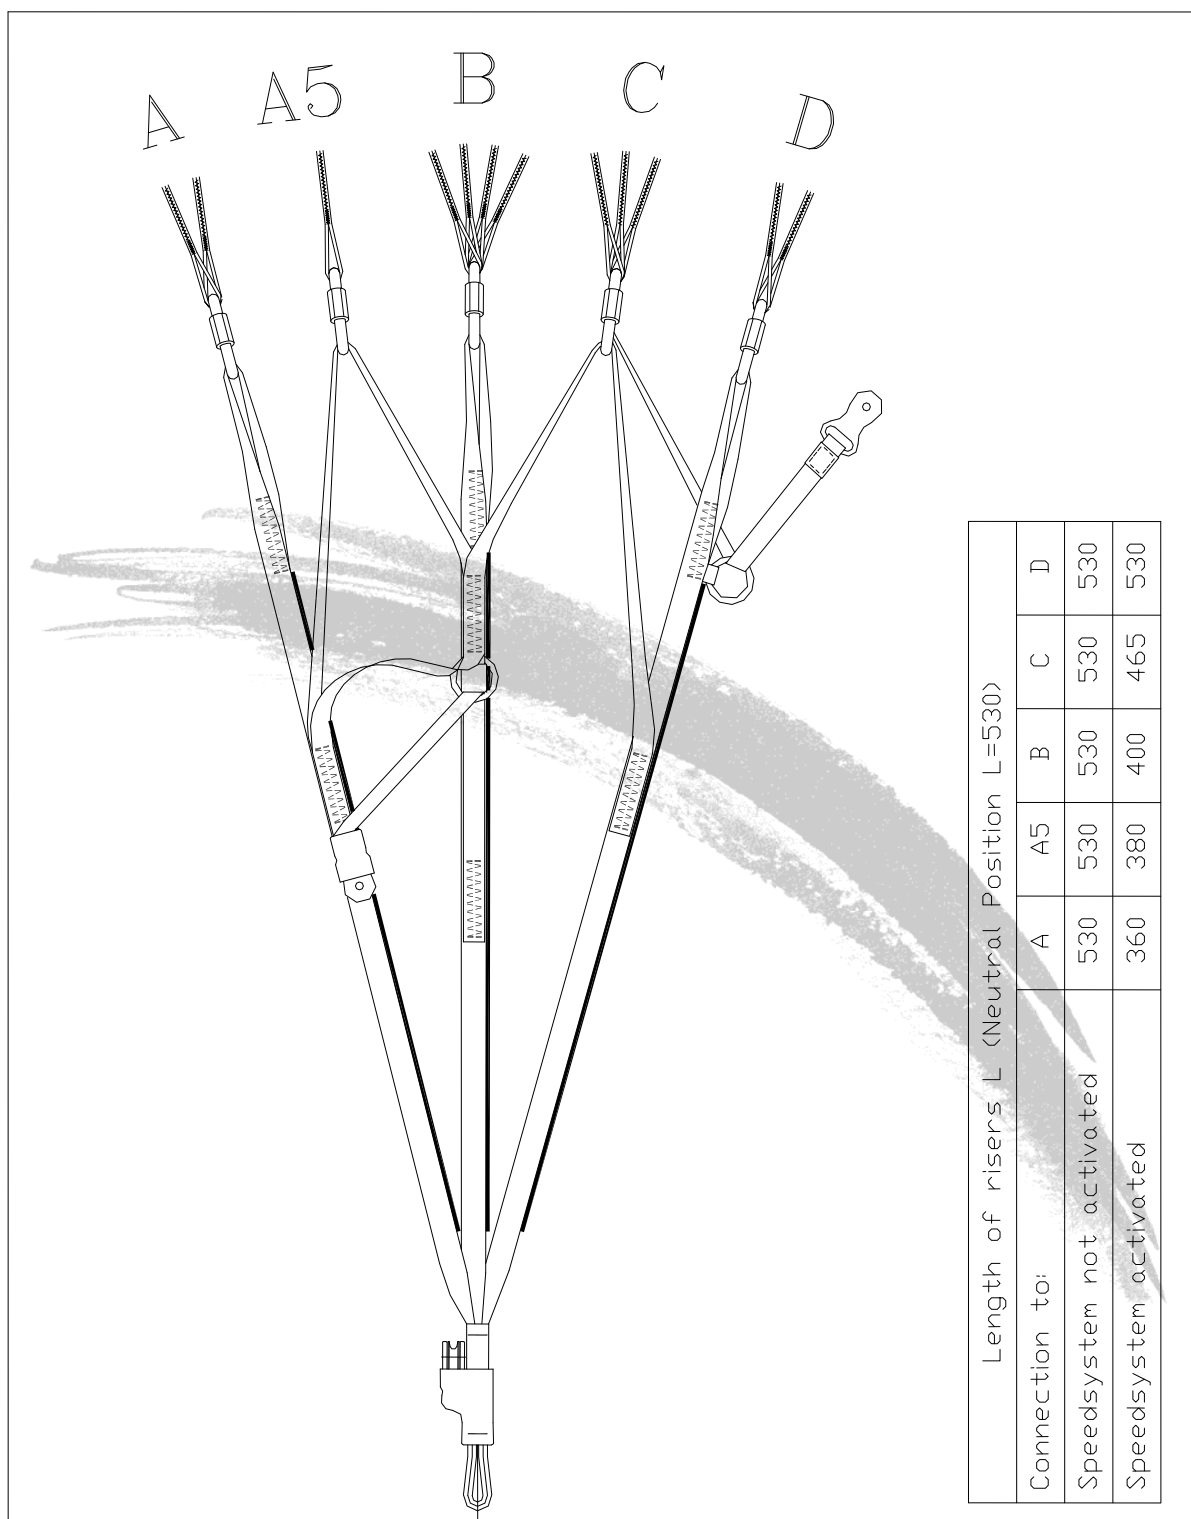

* All measurements are in mm

Drawn by	Adam Wechsler	Part N 12001	Toll ±5	Quantity per glider: 2
Date	04.12.2008	Name RISER		Drawing N
Scale				Li.15.22.10
Approved	Anatoly Cohn			
APCO Aviation LTD. 			Product	LIBRA

12 BULLET RISER

The riser which will set the future standard for the industry - reduction of riser drag by 80% and more.

Its drop shaped branches produce only a fraction of the drag produced by regular risers. It is still made from the same 25mm. width webbing, but shaped into a tear drop profile - easy to understand and handle


See the photos comparing the 2 risers and their frontal areas - on the left bullet riser, right side regular riser

Using the same 25mm flat webbing riser (facing the flow against its full width -creating a huge amount of drag) and transforming it into a tear drop shape cross section, produces minimal amount of drag - see sketch illustrating the differences.

It is a very effective way of improving performance without sacrificing safety, handling and integrity of the wing.



Bullet riser Vs. Conventional riser

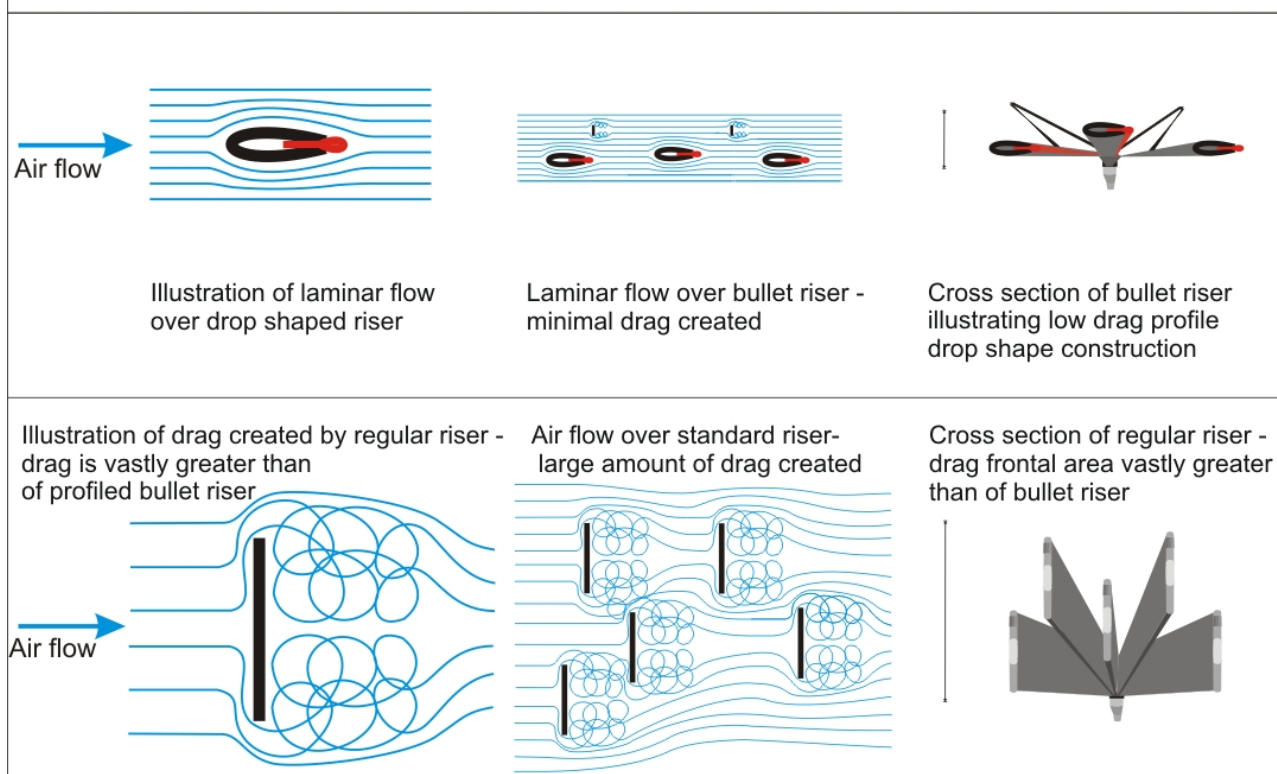

13 INSPECTION

13.1 GENERAL

Pilots, please ensure that your glider has been test flown and fully checked by your dealer before taking it into your possession.

Verify that the dealer checked and confirms that the glider is airworthy.

13.2 BRAKE SETTING

Before the first flight, the pilot/dealer has to take his/her glider and inflate it to check brake length and if needed shorten or lengthen the brake setting to his or her preference. It is important that the brakes are not set too short. If the glider is above your head the brakes should not be pulling the trailing edge down, as that means that the brakes are too short. A good setting is to have about 10 cm of slack in the brake from the brake guide (pulley) on the riser to the activation point of the brakes. (See Diagram below)

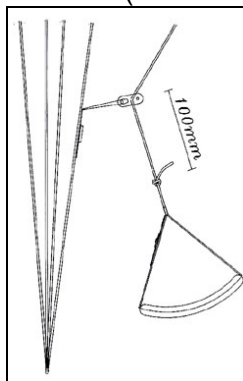



Figure 13-1 Brake Line Adjustment

13.3 ACCELERATED FLIGHT BRAKE COMPENSATOR

All gliders share a common problem in accelerated flight. The trailing edge moves up when the angle of attack is reduced for accelerated flight.

Since the brake line length / brake slack is adjusted for trim speed, on accelerated flight the brake line is not long enough and actually starts to pull down the trailing edge, slowing the speed.

APCO is introducing automatic compensator - this automatically compensates for the lack of brake line length in accelerated flight, allowing for full potential of speed range. See sketch below for explanation.

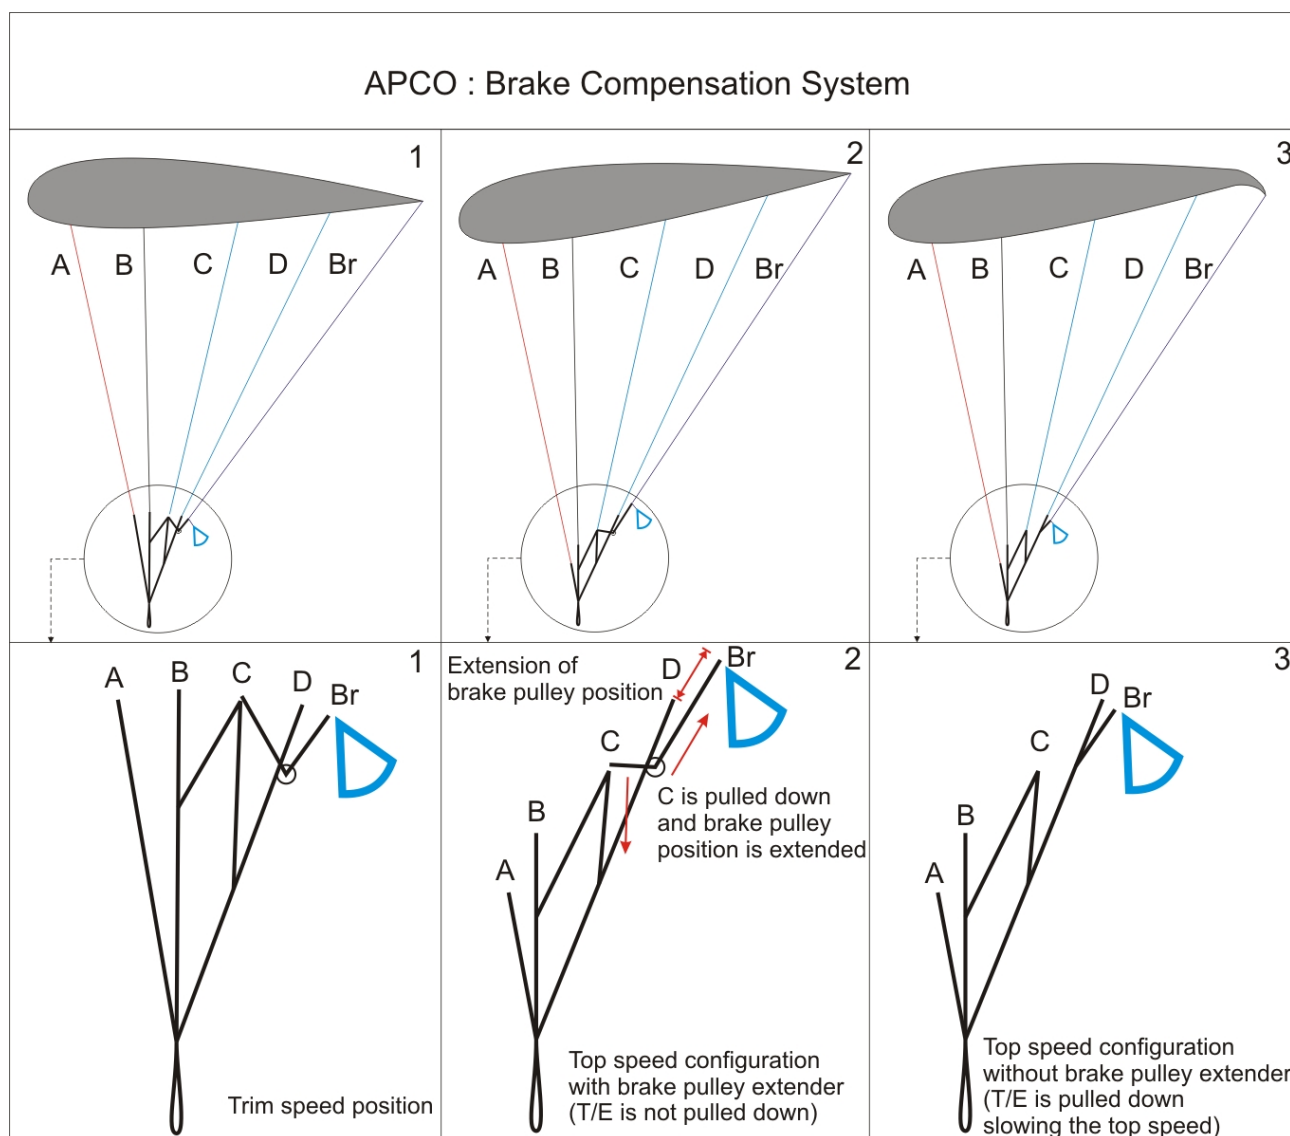

13.4 FIRST CHECK AND PREFLIGHT INSPECTION

With every new glider, the following points should be checked:

- Connection points between the glider and the harness.
- Check that there are no lines twisted, tangled or knotted.
- Check that the risers and speed-system are hooked up to the harness correctly.





13.5 REGULAR INSPECTION CHECKS

- Damage to lines, webbing and thread on the stitching of the harness and risers.
- The stainless steel connection links on the risers are not damaged and are fully closed.
- The pulleys of the speed system are free to move and the lines are not twisted.
- The condition of the brake lines, stainless steel rings and the security of the knot attaching the brake handle to the brake line.
- The sewing, condition of the lines and connection of the lines.
- Damage to hook up points on the glider.
- Internal damage to the ribs and diagonal ribs.
- Damage to the top and bottom panels and seams between panels.

13.6 LINE MAINTENANCE

Several groups of suspension lines and one brake line are attached to each riser. The groups are called A, B, C, D and brake lines. The stabilizer lines are connected along with the B-lines. Superaramid lines are known to be sensitive to the influence of the elements. They must be carefully inspected periodically. In his/her own interest, the pilot must observe the following points to ensure maximum performance and safety from the glider.

- Avoid sharp bending and squeezing of lines.
- Take care that people do not step on the lines.
- Do not pull or jerk the lines if they are caught on rocks or vegetation.
- Avoid getting the lines wet. If they do get wet, dry them as soon as possible at room temperature and never store them wet. Never fly with wet lines as their tensile will be temporarily reduced.

IT IS **STRICTLY RECOMMENDED** TO CHANGE THE BOTTOM LINES ON EVERY PARAGLIDER ONCE A YEAR OR EVERY 100 HOURS, WHICH EVER COMES FIRST. THE REST OF THE LINES MUST BE CHECKED YEARLY AND REPLACED IF NECESSARY.

NEVER REPLACE THE LINES WITH DIFFERENT DIAMETER OR TYPE OF LINES AS ALL GLIDERS WERE LOAD TESTED FOR SAFETY IN THEIR ORIGINAL CONFIGURATION. CHANGING LINE DIAMETER/STRENGTHS CAN HAVE FATAL CONSEQUENCES.





Every six months one each of lower A, B, C and D line must be tested for minimum 45 % of the rated strength. If the line fails under the load test or does not return to its specified length all the corresponding lines must be replaced (e.g. if the line is rated 100 kg. it must withhold 45 kg. or more)

Professional use of gliders: Towing, tandem, schooling and competition flying requires more frequent line inspection and replacement of A, B, C, D and brake lines.

14 TAKE OFF

As this is not a training manual we will not try to teach you launching techniques. We will only briefly go through the different launch techniques to help you get the most out of your glider.

14.1 LAYOUT

Pre-flight check should be done before every flight.

Spread the glider on the ground. Spread the lines, dividing them into eight groups A, B, C, D and brake lines left and right. Make sure the lines are free and not twisted or knotted.

Make sure all the lines are on top of the glider and none are caught on vegetation or rocks under the glider. Lay out the glider in a horseshoe shape. This method insures that all the lines are equally tensioned on launch, and results in an even inflation.

The Flexon rib reinforcements will keep the leading edge open for easy inflation.

The most common reason for a bad launch is a bad layout!

14.2 ALPINE LAUNCH OR FORWARD LAUNCH

The LIBRA has very good launch behaviour in no wind conditions.

For the best results we recommend the use of the following techniques: Lay out the glider and position yourself in the centre of the wing with the lines almost tight.

With a positive and constant force inflate the wing holding only the A-risers, and smoothly increase your running speed. The wing will quickly inflate and settle above your head without the tendency to stick behind, you may have to pull some brake to stop the wing from overshooting on an aggressive run.

After you leave the A-risers, apply about 15% brakes and the LIBRA will gently lift you off the ground.

14.3 STRONG WIND AND REVERSE LAUNCH

The LIBRA has a lot of lifting power and care should be taken in strong wind. It is advisable to have an assistant hold you when attempting a strong wind launch. It also helps if you walk towards the canopy and leave the A-riser just before the glider gets above your head. Then pull a bit of brake to stop the wing from overshooting, but not too much as the glider might pull you off your feet too early. The assistant should let you walk in under the wing on inflation rather than resist the inflation; this reduces the tendency of the glider to lift the pilot prematurely.





14.4 TOW OR WINCH LAUNCHING

All APCO gliders are well suited for winching and have no bad tendencies on the winch. With towing it is important to have the wing above your head on launch and not to try and force a stalled wing into the air. This is especially important if the winch operator is using high tension on the winch. Very little brake if any need be applied on launch and during the tow. Directional changes can be made with weight shift rather than brakes. While on tow, the brake pressure will be higher and more force may be needed to make corrections than in normal flight.

For all our gliders we recommend using tow accelerating system. There are different types existing on the market. Please check with your dealer or tow operator for the recommended tow accelerator system. Use of it will eliminate any chance for accidental stalling on tow.

15 FLIGHT TECHNIQUES

The Libra is an easy and pleasant glider to fly, it has excellent performance and was designed for cross country flying, but can be enjoyed by a wide range of pilots too.

15.1 FLYING SPEED

Indicated trim speed is dependant on the amount of brake the pilot is using, wing loading, altitude above sea level and the accuracy and make of speed probe. The speeds recorded in technical data were at optimum wing loading at sea level using a Flytec 6030 thus there could be a slight variation in speed range numbers that pilots records.

Speed readings in the flight reports could differ as this was measured during testing using various instruments and is an indication of the difference between trim, stall and top speed. The speed range will be the same but the actual numbers may differ.

- With 0% brake the LIBRA will fly at 38 km/h with a sink rate of 1.0m/s.
- At 25% brake the glider will fly at 33km/h with minimum sink rate 0.9 m/s.
- The best glide angle is achieved with 0% brakes and 15% speed system.
- With 80% brake the glider will fly at about 23km/h and will be close to the stall point 21km/h.

CAUTION:

APART FROM WHEN FLARING AT LANDING THERE SHOULD BE NO REASON TO FLY WITH 70% TO 100% BRAKE. THE SINK RATE OF THE GLIDER WILL BE EXCESSIVE AND THERE WILL BE A POSSIBILITY OF ENTERING A DEEP STALL OR FULL STALL SITUATION. THERE IS ALSO THE RISK OF GOING NEGATIVE OR ENTERING A SPIN WHEN ATTEMPTING TO TURN THE GLIDER NEAR THE STALL SPEED.

WARNING:

The use of the speed system in turbulent conditions or close to the ground is dangerous. While flying with the accelerator, the glider has a reduced angle of attack and is therefore more susceptible to turbulence and may collapse or partially deflate. Gliders react faster when accelerated and may turn more. The accelerator should immediately be released in this case.





15.2 THERMAL FLYING

The LIBRA has excellent thermalling capacity and will be a pleasure even when you are in a big gaggle or just having fun on a long XC flight.

The glider has high internal pressure and needs very little pilot input even in very turbulent conditions.

In light lift it is advised to make flat turns to keep the glider from banking too much and avoid increasing the sink rate.

In strong lift conditions it is most effective to make small turns in the core with relatively high bank.

For the best climb rate in ridge lift we recommend using about 15% to 20% brake.

15.3 ASYMMETRIC COLLAPSE

If one side of the glider partially folds or collapses it is important to keep your flying direction by applying weight shift and some brake on the opposite side.

The wing should re-inflate on its own without any input from the pilot.

To help re-inflation it is possible to pull some brake on the collapsed side and release immediately.

In the event of a big deflation, i.e. 70%, it is important to apply brake on the inflated side of the wing, but care must be taken not to pull too much as you could stall the flying side.

The glider is very solid and has a strong tendency to re-inflate after collapse.

15.4 CRAVAT

In case a cravat should occur from an asymmetric collapse or other manoeuvres, it is important to keep your flying direction by applying some brake on the opposite side and then it can usually be opened by pulling down on the stabilo line of the affected side while countering the turn with the opposite brake and weight shift.

It also helps sometimes to pull Big Ears to release the tension on the affected lines, or a combination of the above techniques, i.e. pulling on the stabilo after pulling Big Ears.

15.5 FRONT STALL OR SYMMETRIC COLLAPSE

In the event of a front stall the glider will normally re-inflate on its own immediately without any change of direction. To speed up re-inflation briefly apply 30%-40% brake (to pump open the leading edge). **Do not hold the brakes down** permanently to avoid an unwanted stall.

15.6 B-STALL

The LIBRA has a very clean, stable B stall.

To enter the B stall the pilot has to pull the first 20-cm slowly until the glider loses forward speed and starts to descend vertically.

Then the pilot can pull more on the B until he/she attains a stable 7 to 9 m/s descent rate.

The Glider has no tendency to front rosette or become pitch unstable. To exit the B stall the pilot releases the B slowly until the glider has regained its shape and then the **last 15 cm fast** to prevent the glider from entering deep stall.

The LIBRA can be controlled directionally in the B stall by pulling more on one B riser than on the other to create a turn in any direction. The B-stall is a safe controlled way of losing altitude fast without any forward speed.





15.7 BIG EARS

Altitude can be lost in a controlled way by collapsing both tips. To do this, take the outermost A-line (attached on its own riser) on both sides and pull them down until the tips collapse. Pulling one side at a time may be more comfortable and easier, especially for smaller pilots. This should close about 30% of the wing in total. It is possible to steer with weight shift.

To increase the sink rate the pilot can push the speed system after he/she has collapsed the tips. This can give up to about 7 m/s sink-rate with about 40-km/h forward speed. To exit, release the speed system and then release the tip A-lines.

It may sometimes be necessary to apply a little brake to open the tips. If using the brakes to open the tips, it is best to open one tip at a time, this avoids reducing your air-speed.

CAUTION:

DO NOT ATTEMPT ANY EXTREME MANEUVRES WITH THE TIPS COLLAPSED AS THIS DOUBLES THE LOAD ON THE CENTER LINES AND ATTACHMENT POINTS, WHICH COULD LEAD TO LINE FAILURE.

15.8 DEEP STALL OR PARACHUTAL STALL

Under normal flying conditions the LIBRA will have no tendency to enter deep stall. All gliders can however under certain conditions enter and stay in deep stall configuration (as a result of ageing of materials, improper maintenance or pilot induced).

15.8.1 Signs of parachutal stall

- The pilot has very little or no forward speed and no wind in his face.
- The glider will be fully open but the cells will be bulging in and not out on the bottom surface.
- The glider might have a very slow turning sensation.
- You will have an increased vertical descent.

15.8.2 Exit from parachutal stall

It is important to recognize this situation. Most accidents involving parachutal stall happen because the pilot did not realize that he was in deep stall.

The best way to exit a parachutal stall is to pull all the A risers down to get the wing flying again. The pilot can pull the riser down until the wing starts to fly again. The moment the wing starts to fly the pilot should release the A risers, or the wing might suffer a frontal collapse.

Alternatively the pilot can push the speed bar to lower the angle of attack and get the wing flying again.

By pulling one or both brakes while in deep stall the pilot can accidentally enter a full stall or spin. (not recommended)





15.9 SPIRAL DIVES

The LIBRA has very good behaviour in spiral and has no tendency to stick in the spiral. By progressively applying brake on one side the glider can be put into a spiral dive. Safe high sink rates can be achieved like this. The spiral has to be exited slowly by releasing the brake over one complete turn or the glider may pitch forward and possibly suffer a collapse.

Care must be taken that the pilot has enough height to exit the spiral safely.

Sink rates in excess of 19m/s can be obtained.

CAUTION:

SOME GLIDERS CAN BE NEUTRAL IN SPIRAL AND MAY NOT EXIT WITHOUT PILOT INPUT. TO EXIT A NEUTRAL SPIRAL THE PILOT HAS TO LEAN HIS/HER WEIGHT TO THE OUTSIDE OF THE TURN OR APPLY BRAKE ON THE OUTSIDE WING. AS SOON AS THE GLIDER STARTS TO SLOW DOWN IN THE SPIRAL THE OUTSIDE BRAKE MUST BE RELEASED.

PILOTS CAN SUFFER BLACK OUTS IN SPIRALS AND THE PILOT HAS TO EXIT THE SPIRAL AS SOON AS he/she FEELS ANY ABNORMAL SYMPTOMS (Black dots in field of vision or light-headedness).

15.10 STRONG TURBULENCE

NEVER FLY IN STRONG TURBULENCE!

If you unexpectedly encounter strong turbulence, fly with about 20% brake applied to increase the internal pressure and the angle of attack of the canopy and land as soon as possible. If the air is turbulent on landing approach, land with Big Ears.

Learn to fly actively and to anticipate collapses and prevent them by applying brake when needed before you have unwanted collapses.

15.11 STEERING NOT FUNCTIONING

If the pilot cannot reach the brake or steering lines for any reason or if they are not functioning properly, (for example: If they break on a damaged point) the pilot can control the glider by pulling down on the rear risers.

Care must be taken when steering like this, as much less input is needed to turn the wing and the response of the wing is also much slower than when using the brakes.

IF YOU PULL TOO MUCH ON ONE OR BOTH RISERS THE GLIDER WILL SPIN OR STALL.

On the landing flare the pilot should be especially careful not to stall the glider too high.





16 LANDING

Before landing, the pilot should determine the wind direction, usually by checking a windsock, flags, smoke or your drift over the ground while doing one or more 360° turns.

- Always land into the wind.
- At a height of about 50 meters your landing setup should begin. The most commonly used one is to head into the wind and depending on the wind strength the pilot should reach his/her landing point by making s-turns.
- At a height of about 15 meters the final part of your descent should be made at trim speed into the wind.
- At a height between half a meter and one meter you can gently flare the glider by pulling gradually down on the brakes to the stall point. When top-landing it is sometimes not necessary to flare or a much smaller flare may be required, especially in strong ridge conditions.

16.1 TREE LANDING

If it is not possible to land in an open area, steer into the wind towards an unobstructed tree and do a normal landing approach as if the tree is your landing spot. Flare as for a normal landing. On impact hold your legs together and protect your face with your arms.

After any tree landing it is very important to check all the lines, line measurements, and the canopy for damage.

16.2 WATER LANDING

As you approach landing, release all the buckles (and cross-bracing if present) of the harness except for one leg. Just before landing, release the remaining buckle. It is advisable to enter the water downwind. Let the canopy rotate completely forward until it hits the water with the leading edge openings; the air inside will then be trapped, forming a big air mattress and giving the pilot more time to escape. Less water will enter the canopy this way, making the recovery much easier. **Get away from the glider and lines as soon as possible**, to avoid entanglement. Remember that a ballast bag can be emptied and then inflated with air for a flotation aid.

The canopy should be carefully inspected after a water landing, since it is very easy to cause internal damage to the ribs if the canopy is lifted while containing water. Always lift the canopy by the trailing edge, not by the lines or top or bottom surface fabric.

16.3 LANDING IN TURBULENCE

One of the safest ways to land a glider in turbulent conditions is to use Big Ears. This reduces the chances of getting a collapse while on final approach. Use weight shift to control your approach. It is possible to keep the ears in until you are ready to flare the glider. Simply release the A-risers and flare the glider, starting a little higher than usual. Practice this in normal conditions before you need it in an emergency.



17 PACKING

Spread the canopy completely out on the ground. Separate the lines to the left and the right side of the glider. If the risers are removed from the harness, join the two risers together by passing one carabiner loop through the other. This keeps them neatly together and helps to stop line tangles.

Fold the canopy alternately from the right and left sides, working towards the centre, press out the air, working from the rear towards the front. Place the risers at the trailing edge of the folded canopy and use them to finally roll up the canopy.

18 MAINTENANCE & CLEANING

Cleaning should be carried out with water and if necessary, gentle soap. If the glider comes in contact with salt water, clean thoroughly with fresh water. **Do not use solvents of any kind**, as this may remove the protective coatings and destroy the fabric.

18.1 *Butt holes (Velcro closure on trailing edge tip)*

In order to empty sand and small stones from the glider simply shake the sand or small stones into the wing tip and open the **Butt holes (Velcro closure on trailing edge tip)** to empty. Do not forget to close the **Butt holes** afterwards.



19 STORAGE

When the glider is not in use, the glider should be stored in a cool, dry place. A wet glider should first be dried (out of direct sunlight). Protect the glider against sunlight (UV radiation). When on the hill keep the glider covered or in the bag. Never store or transport the glider near paint, petrol or any other chemicals.

Do not leave your paraglider in the trunk of a car or exposed to the sun.

Temperatures on a hot summer's day in a closed environment: car, etc. can easily reach over 60°C

At these temperatures Nylon permanently changes its characteristics which may alter the behavior and shape of the wing.





It will cause permanent damage to the paraglider, rendering it non-airworthy. APCO's warranty will not be applicable.

20 DAMAGE

Using spinnaker repair tape (for non-siliconized cloth) can repair tears in the sail (up to 5cm). A professional repairer should repair greater damage.

21 GENERAL ADVICE

A qualified person or agent of the company should check the glider every year. The glider is carefully manufactured and checked by the factory. Never make changes to the canopy or the lines. Changes can introduce dangerous flying characteristics and will not improve flying performance.

Do not put the glider in direct sunlight when not necessary. In order to protect the glider during transportation or waiting time we recommend one of our lightweight storage bags.


If you have any doubts about flying conditions - do not begin.

If you have any questions, please contact your dealer or us.


Lastly, be equipped with a certified emergency parachute and helmet on every flight.




22 LIBRA EXTRA SMALL SKETCHES

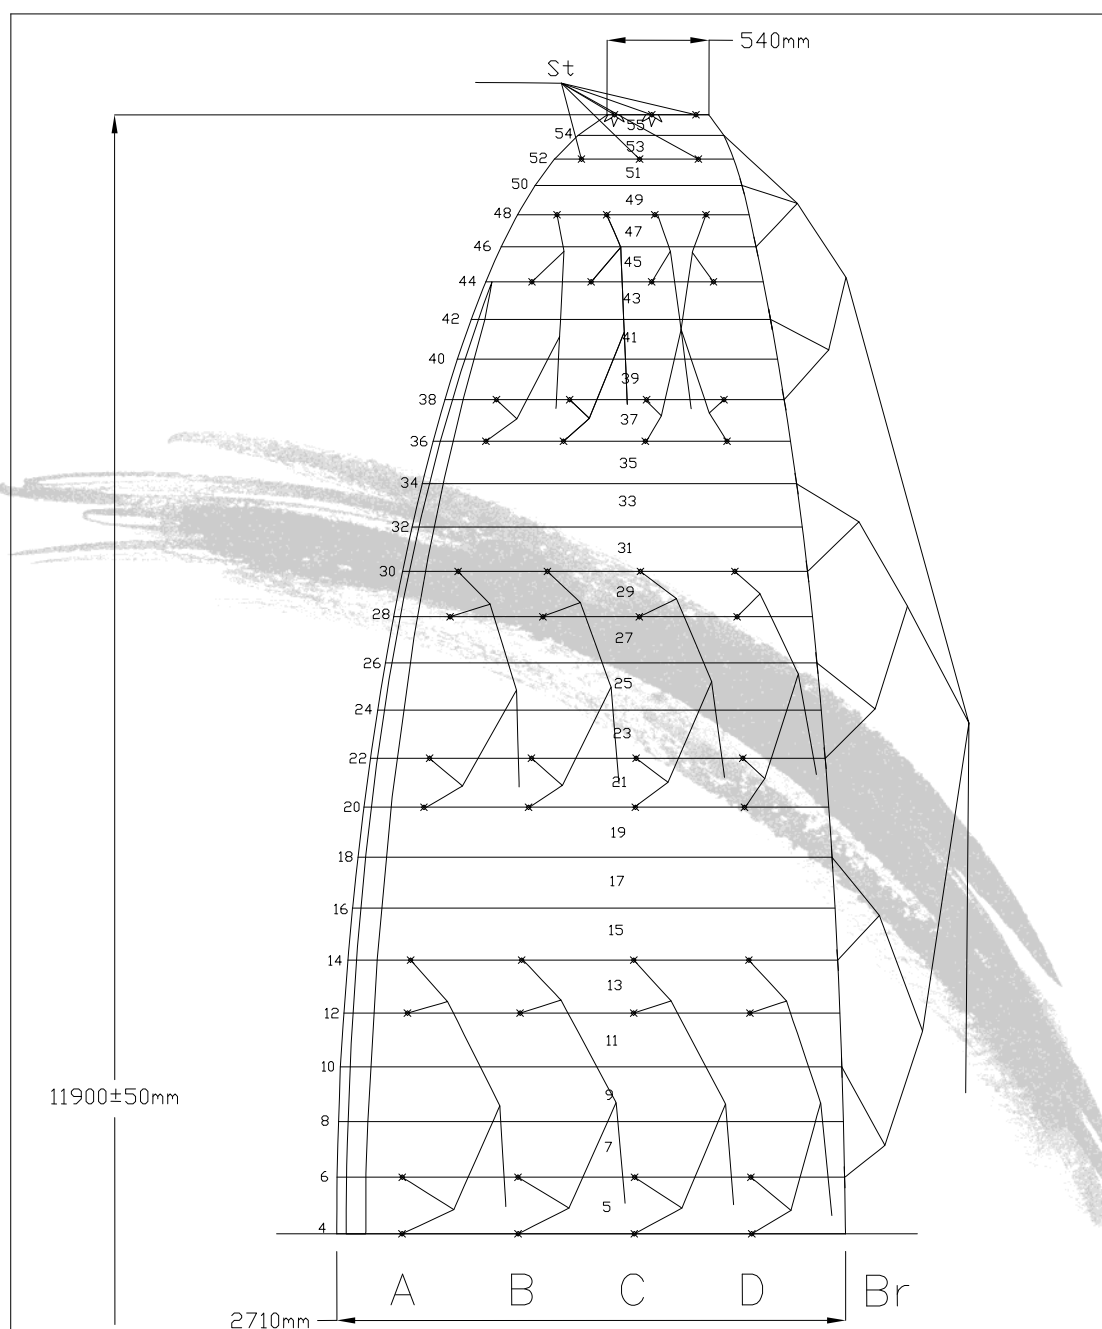


* All measurements are in mm

Drawn by Adam Wechsler	Part N	Toll ±10	
Date 03.03.2009	Name Lines sketch		Drawing N
Scale -			LI.15.10.38
Approved Anatoly Cohn			
APCO Aviation LTD. 		Product LIBRA <XS>	Revision 1


23 LIBRA SMALL SKETCHES

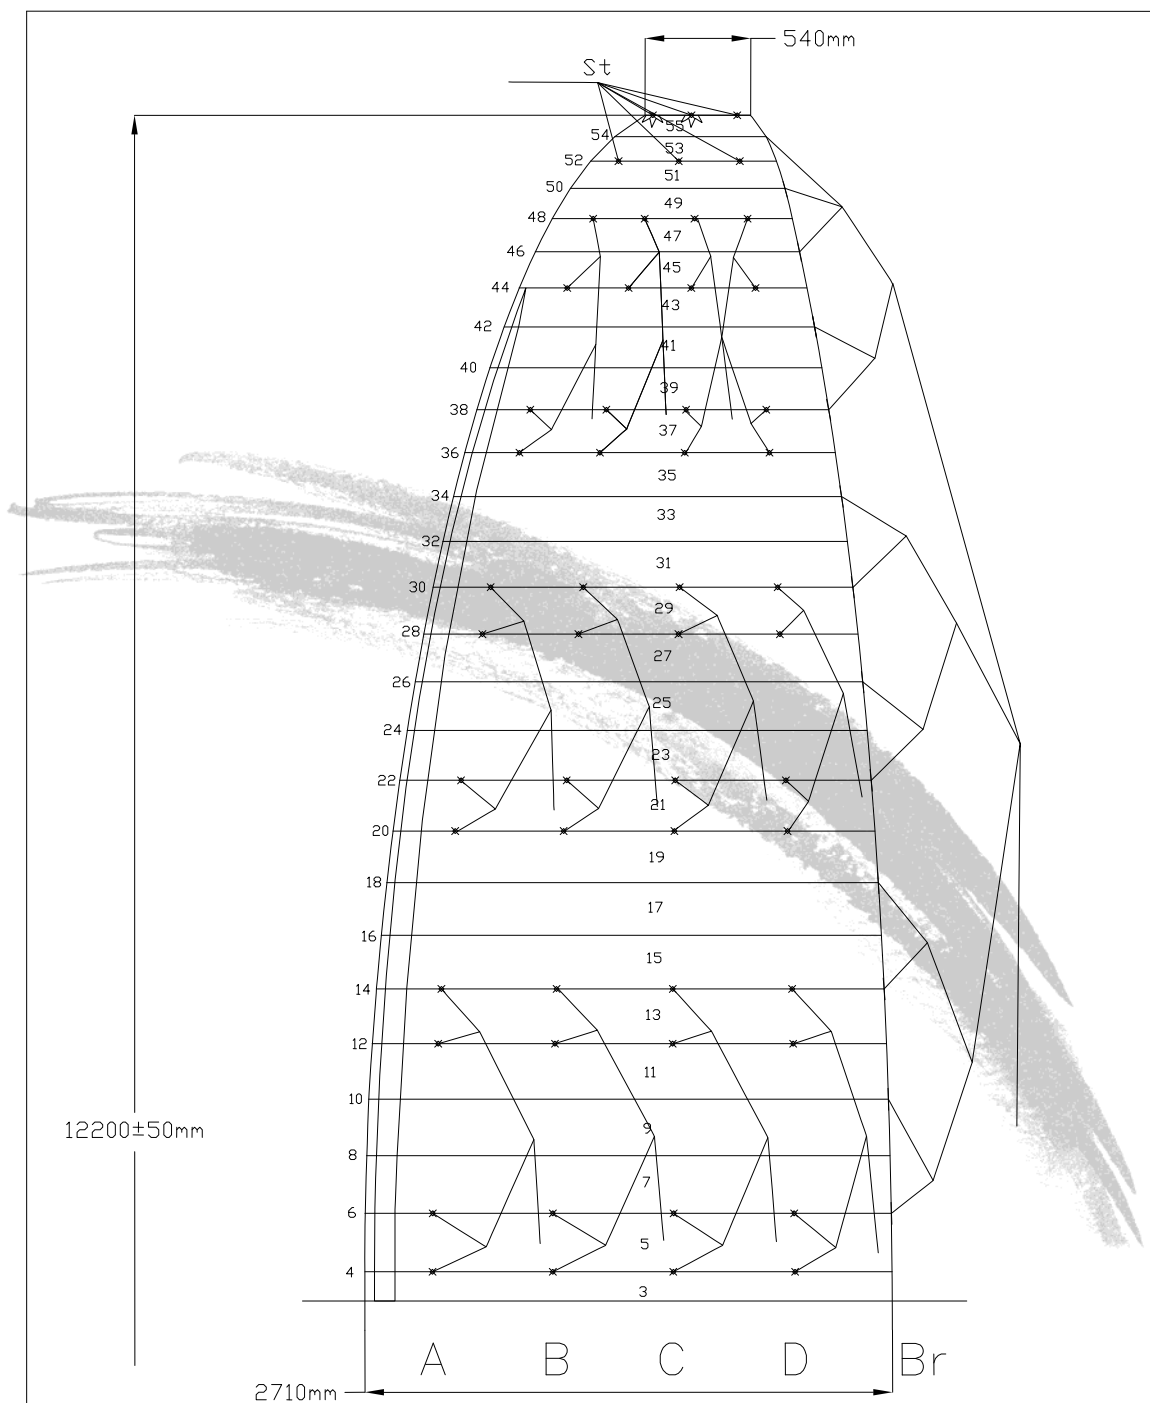

* All measurements are in mm

Drawn by Adam Wechsler	Part N	Toll ±10	
Date 28.01.2009	Name Lines sketch		Drawing N
Scale -			LI.15.10.38
Approved Anatoly Cohn			
APCO Aviation LTD. 		Product LIBRA <S>	Revision 3


24 LIBRA MEDIUM SKETCHES

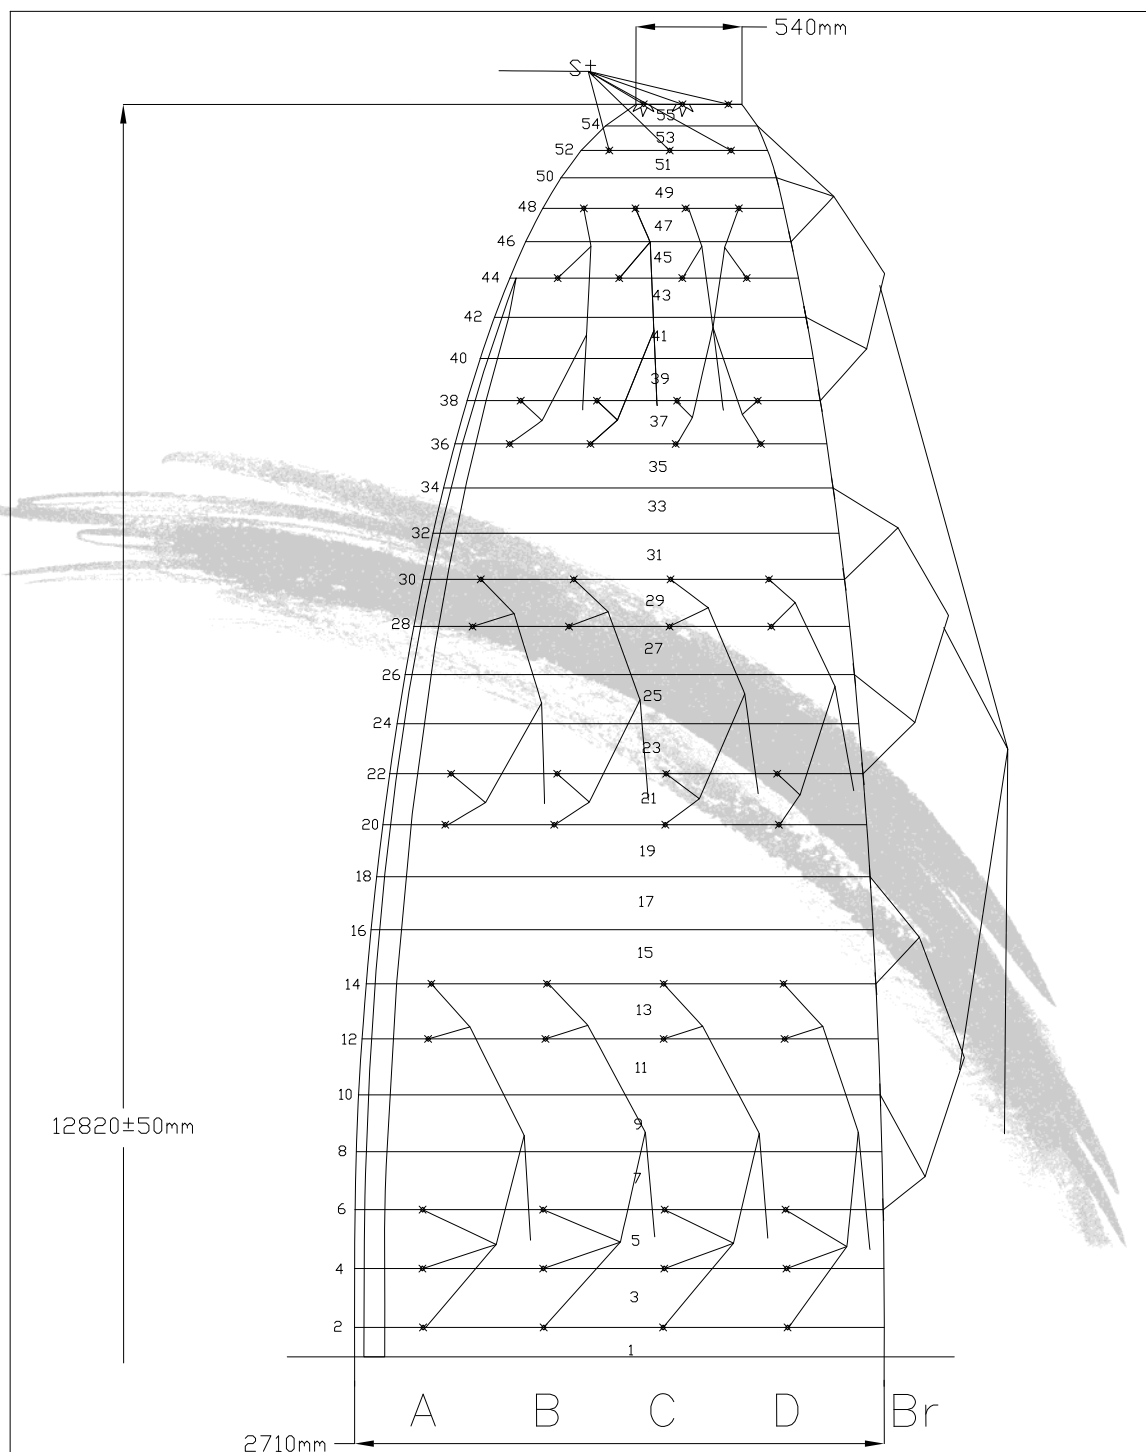


* All measurements are in mm

Drawn by Adam Wechsler	Part N	Toll ±10	
Date 28.01.2009	Name Lines sketch		Drawing N
Scale			LI.15.10.38
Approved Anatoly Cohn			
APCO Aviation LTD. 		Product LIBRA <M>	Revision 8

25 LIBRA LARGE SKETCHES

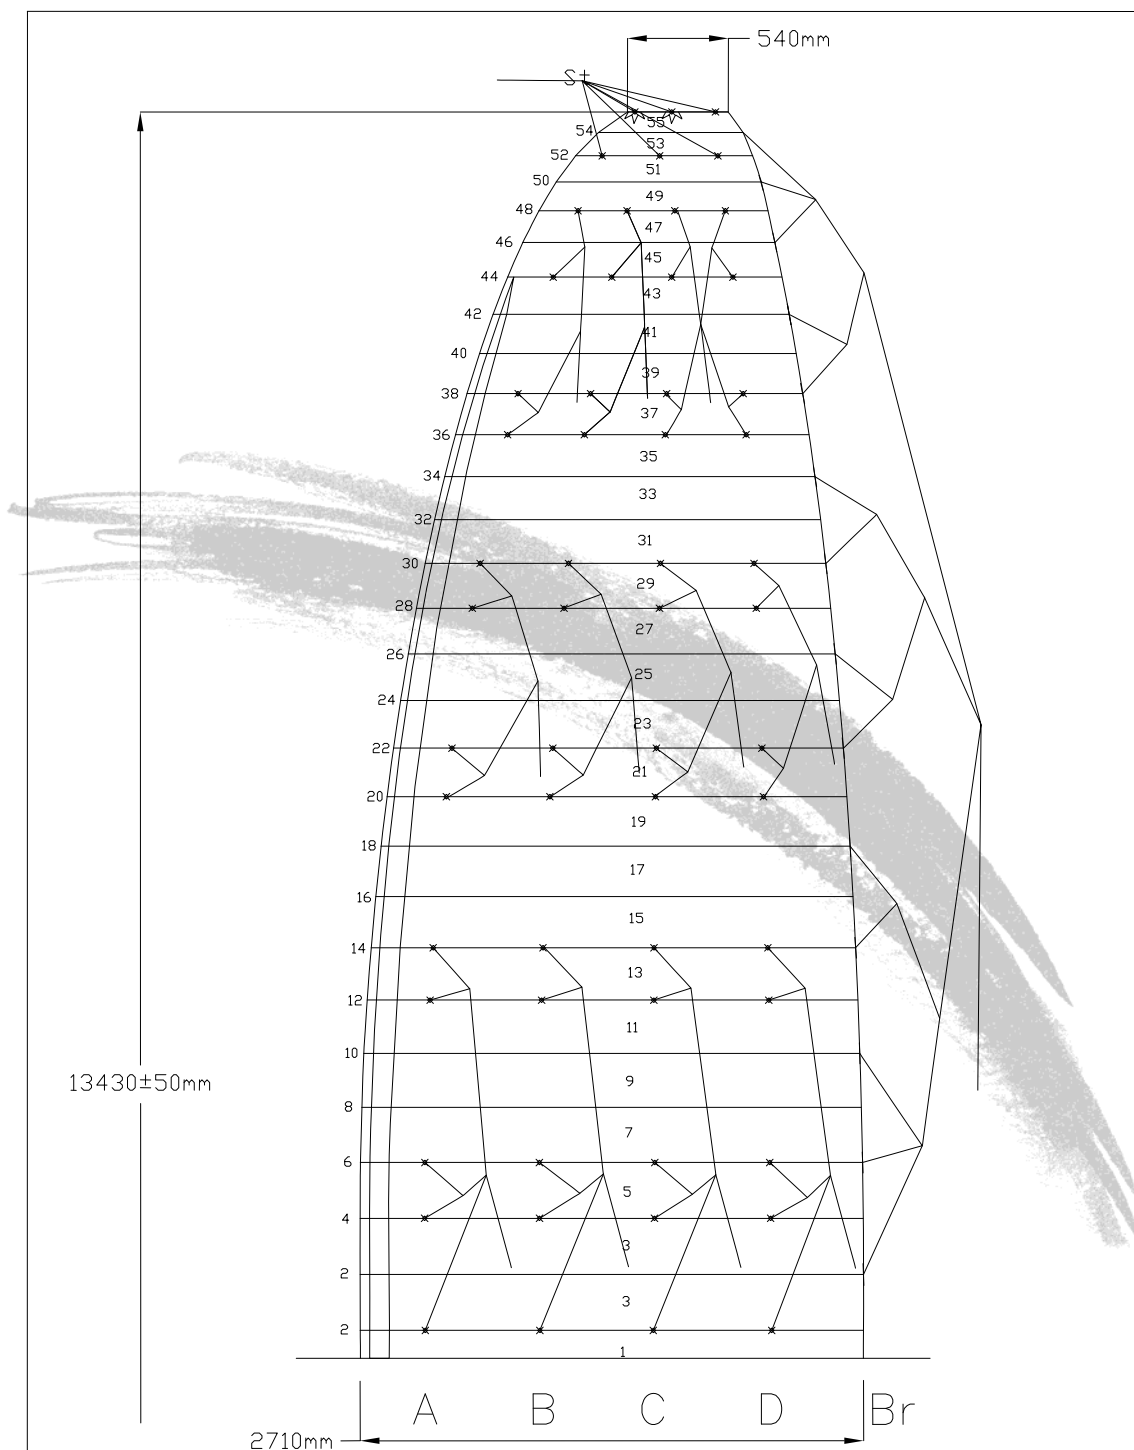

* All measurements are in mm

Drawn by Adam Wechsler	Part N	Toll ±10	
Date 24.03.2009	Name	Drawing N LI.15.10.38	
Scale	Lines sketch		
Approved Anatoly Cohn			
APCO Aviation LTD. 		Product LIBRA <L>	Revision 1



26 LIBRA SMALL CERTIFICATION

para-test.com



paragliding by air turquoise

Air Turquoise SA
Rte du Pré-au-Comte 8 | CH-1844 Villeneuve
tel. +41 21 965 65 65 | mobile +41 79 202 52 30
info@para-test.com



Class: **C**

In accordance with EN standards 926-2:2005 & 926-1:2006:

PG_0202.2009

Date of issue (DMY):

06. 08. 2009

Manufacturer: **Apco Aviation Ltd.**

Model: **Libra S**

Serial number:

Configuration during flight tests

Paraglider

Maximum weight in flight (kg)	95
Minimum weight in flight (kg)	70
Glider's weight (kg)	6
Number of risers	4
Projected area (m2)	23.53

Accessories

Range of speed system (cm)	16
Speed range using brakes (km/h)	13
Range of trimmers (cm)	0
Total speed range with accessories (km/h)	24

Harness used for testing (max weight)

Harness type	ABS
Harness brand	Sup'Air
Harness model	Evo XC M

Inspections (whichever happens first)

every 12 months
Warning! Before use refer to user's manual
Person or company having presented the glider for testing: None

Harness to risers distance (cm) 49

Distance between risers (cm) 45

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
A	A	B	C	A	A	A	A	B	B	A	C	B	C	A	A	A	A	A	B	B	A	A	0





27 LIBRA MEDIUM CERTIFICATION

para-test.com



paragliding by air turquoise

Air Turquoise SA
Rte du Pré-au-Comte 8 | CH-1844 Villeneuve
tel. +41 21 965 65 65 | mobile +41 79 202 52 30
info@para-test.com



Class: **C**

In accordance with EN standards 926-2:2005 & 926-1:2006:

PG_0203.2009

Date of issue (DMY):

06. 08. 2009

Manufacturer: **Apco Aviation Ltd.**

Model: **Libra M**

Serial number:

Configuration during flight tests

Paraglider

Maximum weight in flight (kg)	110
Minimum weight in flight (kg)	85
Glider's weight (kg)	6.3
Number of risers	4
Projected area (m2)	25.01

Accessories

Range of speed system (cm)	16
Speed range using brakes (km/h)	13
Range of trimmers (cm)	0
Total speed range with accessories (km/h)	24

Harness used for testing (max weight)

Harness type	ABS
Harness brand	Sup'Air
Harness model	Altiplume L

Inspections (whichever happens first)

every 12 months
Warning! Before use refer to user's manual
Person or company having presented the glider for testing: None

Harness to risers distance (cm) 46

Distance between risers (cm) 48

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
A	A	B	C	A	A	A	A	B	C	A	A	A	C	A	A	A	A	A	B	B	A	A	0





28 LIBRA LARGE CERTIFICATION

para-test.com



paragliding by air turquoise

Air Turquoise SA
Rte du Pré-au-Comte 8 | CH-1844 Villeneuve
tel. +41 21 965 65 65 | mobile +41 79 202 52 30
info@para-test.com



Class: **C**

In accordance with EN standards 926-2:2005 & 926-1:2006:

PG_0261.2009

Date of issue (DMY):

13. 08. 2009

Manufacturer: **Apco Aviation Ltd.**

Model: **Libra L**

Serial number:

Configuration during flight tests

Paraglider

Maximum weight in flight (kg)	130
Minimum weight in flight (kg)	100
Glider's weight (kg)	6.8
Number of risers	4
Projected area (m2)	26.49

Accessories

Range of speed system (cm)	16
Speed range using brakes (km/h)	13
Range of trimmers (cm)	0
Total speed range with accessories (km/h)	24

Harness used for testing (max weight)

Harness type	ABS
Harness brand	Gin Gliders
Harness model	Gingo 2 L
Harness to risers distance (cm)	48
Distance between risers (cm)	46

Inspections (whichever happens first)

every 12 months
Warning! Before use refer to user's manual
Person or company having presented the glider for testing: None

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
A	A	A	A	A	A	A	A	A	B	C	A	A	A	C	A	A	A	A	B	A	A	A	0





APCO wishes you many hours of enjoyable flying.

Take Air!

